



THE GRILL

DUO SAVOR

User manual

frifri[★].BE



THIS APPLIANCE IS ONLY MEANT FOR DOMESTIC USE. IMPORTANT WARNINGS.

DEFINITIONS

Following guidelines are meant to identify the prescriptions relative to safety and material damage as well as the level of severity of the danger. They warn you for potential risk of personal injury. Comply to all safety prescriptions to avoid risks of personal injury or death.

DANGER

Indicates a risk circumstance, which, if not avoided, could cause important injury or death. This word is only meant for most extreme situations.

WARNING

Indicates dangerous circumstances, which, if not avoided, could cause serious injuries.

ATTENTION

Indicates a dangerous circumstance, which, if not avoided, could cause small or moderately serious injuries.

NOTICE

Relates to handlings not relied to personal injuries, such as material damage and/or damage caused by the appliance.

Always comply with the elementary safety prescriptions when using electrical appliances, including the following :


READ ALL INSTRUCTIONS BEFORE USE

WARNING - In order to reduce risks of fire, electrical shock or serious personal injury :

- Never touch hot surfaces. Use the handle.
- Never immerse the electrical cord, the plug or the base in water/liquid
- Unplug the appliance when the appliance is not in use and before cleaning. Let the appliance cool down before assembling or disassembling

- Never use accessories not recommended by the manufacturer. Since the accessories can heat up during operation, let them cool down before handling them
- Never place on or close to a heat source, such as a gas or electrical stove, nor in an oven
- Be careful when moving all appliances with hot food or liquids, such as oil
- Never leave the appliance unattended when in use
- Never plug in or unplug the appliance with wet hands
- Take all necessary precautions to avoid burns, fire or other personal injury or material damage, since this appliance becomes hot during operation
- If the appliance should fall in water, unplug it immediately. Do not touch it or put your hands in the water
- Use the appliance in a well-ventilated room. Leave at least 10 to 15 cm around the appliance for the air to flow easily
- If the electrical cord is damaged, it should be replaced by the manufacturer, a certified service center or a person with similar qualifications in order to avoid all danger
- This appliance does not have parts to be repaired by the user. Never try to repair this appliance yourself. The maintenance may only be executed by qualified personnel; bring the appliance to a repair service of your choosing to examine and repair it
- This appliance can be used by children above the age of 8 as well as by persons whose physical, sensorial or mental capacities are reduced or with a lack of experience and knowledge when under supervision or having received instructions from another person responsible for their safety about the use of this appliance in advance and that they understand the dangers. Children should not play with the appliance. Cleaning and maintenance by the user should not be carried out by children under

the age of 8 except when supervised.

- Keep the appliance out of reach of children under the age of 8
- Never use separate timers or remote controls
-  Caution, very hot surface
- This appliance is only meant to be used domestically

CAUTION

To reduce risks of personal injury :

- This appliance can only be used inside, not suited for commercial nor industrial use. It is only suited for domestic use to grill/heat food for human consumption. Do not use the appliance outside or for other purposes
- Never leave the electrical cord where it could be pulled or where it could be tripped over (f.ex. on the edge of a table or kitchen counter) or let it touch hot surfaces
- Always wear insulated or heat resistant gloves during operation of this appliance and use kitchen utensils
- To unplug the appliance, never pull the electrical cord but use the plug
- Always use the appliance on a flat, stable and heat resistant surface




DESCRIPTION OF THE APPLIANCE



Technical features

- Model : CG-PL2000BL
- Power : 2000 Watts
- Voltage : 220-240 V CA
- Rate : 50/60 Hz

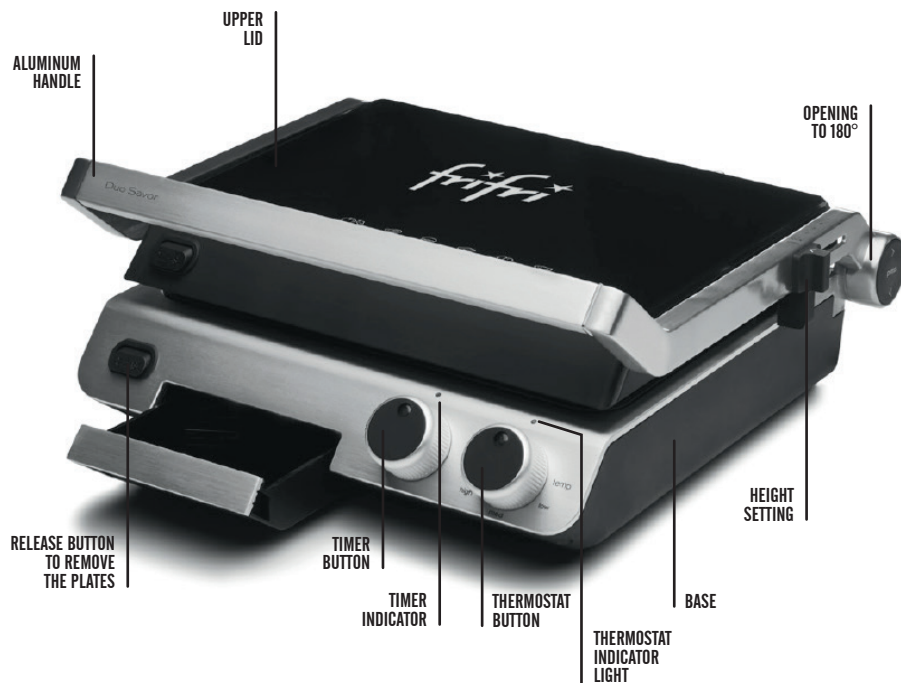

SMOOTH PLATE SET (PLANCHA)



LOWER GRILL PLATE

UPPER GRILL PLATE

SPECIFIC PRESCRIPTIONS

Extension cords can be used if close attention is paid during use. When using an extension cord :

- The rating should be at least equal to the rate of the appliance
- The extension cord must be placed on the table or kitchen counter so that children cannot pull it, and so that it cannot be tripped over
- The extension cord must be an earthed plug with 3 wires

KEEP THIS MANUAL IN ORDER TO CONSULT LATER IF NEEDED

BEFORE FIRST USE

Press the release button of the upper plate to remove the upper plate, then press the release button of the lower plate to remove the lower plate. Clean both plates and the juice collector with hot soapy water; rinse and dry. These parts are dishwasher proof.

NEVER IMMERSE OR EXPOSE THE BASE IN OR TO WATER. Place the upper and lower plates in their respective position before use. See the chapter "Assemble/Disassemble the plates" below for detailed instructions.

REMARK : When using the plates for the first time, grease the non-stick plates with oil using kitchen paper. If necessary, grease before every use.

ASSEMBLING

Place the appliance on a clean, flat, stable and heat resistant surface and leave at least 10 to 15 cm around the appliance to allow air to flow easily.

POSITIONING THE UPPER HOUSING :

1. Closed/heating position: The upper housing is closed and rests on the base. Use this position to start/warm up the appliance and to grill most of the food.



2. Open position: The upper housing is open and at the same level as the base, which creates 2 baking surfaces. Use this position to grill larger quantities of food. To open the appliance, pull the release hinge and open the handle



ASSEMBLE/CHANGE PLATES :

Engage the notch at the back of the lower plate into the locking hooks, then push on the front of the plate to fix it. Repeat to fix the upper plate.



USER MANUAL



WARNING : The grill plates and the metal surfaces of the upper housing and the handle will become very hot when using the appliance. To avoid all risks of burn, wear insulating or heat resistant gloves when using the appliance, and only touch the black part of the handle.

NOTICE : Only use heat resistant wooden, plastic or silicone utensils to add/remove food. Never use metal utensils, these could damage the surface of the appliance.

REMARK : Upon first use, there might be a slight odor or smoke output. This is normal and without danger and will disappear in time.

DUO SAVOR FROM FRIFRI

For grilling burgers, boneless meat or fish or thin pieces of meat and fish as well as vegetables. In "Closed" position, the food will grill fast, since both sides heat simultaneously.

1. Start by closing the appliance, then turn the thermostat button to the desired position 1/2/3/4, which corresponds to following temperatures :

0 Close	1 80-120 C°
2 120-160 C°	3 160-200 C° 4 200-240 C°

2. Set the Timer button on the desired time : necessary preparation time plus heating time 5 to 6 minutes. If the timer is set on 30 minutes, the appliance will shut down after half an hour. The timer display shows the six time options 5/10/15/20/25/30.

3. If the Timer button is on position ZERO, the appliance doesn't have any power.
4. Turn the Timer button on the desired time. The appliance is on, the Timer instruction, Thermostat light and the Timer button light up.
5. The Timer button always has power. When the Thermostat button is on position ZERO, the appliance does not heat up, but is in standby. The neon light for the Timer, the Thermostat indicator and the Timer button light are lit, but the neon light for the Thermostat button doesn't light up. The appliance only heats up when the thermostat button is set on the temperature, and the Thermostat indicator lights up. The preheating starts, the indicator lights up.
6. The appliance is preheating; the grilling can start. During grilling, the neon light of the Thermostat will alternatively go on and off, which indicates the appliance keeps the set temperature until the food is grilled.

REMARK : On the housing, different food is presented with their respective grilling time, this is only a reference.

7. Place the food on the lower plate and lower the upper plate on the food (position "Closed"). The upper plate will automatically adapt to the thickness of the food. When you grill food, which doesn't need the upper plate, such as kebab or fish, leave the appliance on the "Open" position.

REMARK : When you grill different pieces of food simultaneously, the pieces should have a similar thickness for the upper plate to rest equally on all the pieces for an equal grilling of the food.

8. Once the grilling is finished, remove the food, unplug the appliance and let the appliance cool down (minimum 30 minutes) before moving, disassembling or cleaning it.

ATTENTION : Always unplug the appliance once finished and when the appliance is not in use.

PANINIS PRESS

Use the upper and lower plates in "Closed" position to grill a combination of ingredients (for example vegetables, meat and cheese) between two slices of bread or in a tortilla/pita.

1. Follow steps 1 to 7 of chapter "Duo Savor from Frifri" above.
2. Place the food on the lower plate and lower the upper plate on the food. The upper housing will automatically adapt to the food.

REMARK : When you grill different pieces of food simultaneously, the pieces should have a similar thickness for the upper plate to rest equally on all the pieces for an equal grilling of the food.

3. Once the grilling is finished, remove the food, unplug the appliance and let the appliance cool down (minimum 30 minutes) before moving, disassembling or cleaning it.

ATTENTION : Always unplug the appliance once finished and when the appliance is not in use.

DUO SAVOR OPEN

The use of the appliance in "Open" position doubles the grilling surface and allows you to grill food with a different thickness or different food on different plates in order to avoid taste combinations. Use for the grilling of bread, grilled potatoes, open sandwiches or kebabs.

1. Put the appliance in "Open position" and plug in the appliance. The power indicator light will light up red, which indicates the appliance has power.
2. Set the preparation time and the temperature.

REMARK : It might take up to 5 to 6 minutes to reach the set temperature. The indicator light will extinguish to indicate the appliance is ready for use. During grilling, the neon light of the Thermostat goes on and off, which indicates the appliance maintains the set temperature until the food is grilled.



3. Place the food on the grill plates.

4. Once the grilling is finished, remove the food, unplug the appliance and let the appliance cool down (minimum 30 minutes) before moving, disassembling or cleaning it.

ATTENTION : Always unplug the appliance once finished and when the appliance is not in use.

CLEANING AND MAINTENANCE

WARNING : Always make sure the appliance is unplugged and has completely cooled down before, moving, disassembling or cleaning it.

NOTICE : Never use hard or abrasive detergents or sponges to clean the appliance.

1. When the appliance has completely cooled down, carefully remove the juice collector and pour out the content.

2. Remove the food residues from the grill plates.

3. Clean the grill plates and the juice collector with hot soapy water, rinse and dry. These parts are also dishwasher proof

WARNING : Never immerse or expose the base in or to water.

4. Wipe the upper housing and the base with a moist sponge and dry with a soft cloth or kitchen paper.
5. Store the appliance in a cool and dry place.

ENVIRONNEMENT

- In accordance with the European standards*, used electric and electrical appliance cannot in any way be disposed with normal not sorted domestic waste. They must be brought to an official collection center

- Help the protection of the environment and bring this appliance to an official collection center for recycling of appliances at the end of their lifetime

- Bring a used appliance to an official collection center for recycling. Public services for domestic waste collection (the municipality) have collect points where used appliances from private household from the region can be disposed of for free. Collection centers might also come to pick up used appliances from private households

- Inform yourself about the pick-up dates in your region or contact the municipality to know where the collection centers are

* Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 on waste electrical and electronic equipment (WEEE). This indicates that this appliance cannot be disposed with other domestic waste in the EU.

To avoid damaging the environment and public health by an uncontrolled disposal of waste, the appliances must be recycled in a responsible way to encourage sustainable use of material resources.

To dispose of your used appliance, use the return and collecting systems, or contact the store where you bought the appliance. This person can pick up the appliance for an ecological recycling.



WARANTY

Dalcq S.A. provides a special warranty on all parts of the appliance subject to conditions below. The legal regulations about warranty as well as the rights resulting from the legislation about responsibility of the defective products remain unaffected. Possible right to reimbursement of the buyer in case of defaults remain valid, if the conditions below are met.

1. Period of the warranty The warranty applies to all parts of the appliance and starts from the date of purchase (date of invoice) of the appliance and has a duration of 2 years when used privately.

2. Object of the warranty Dalcq S.A. covers the material, construction and manufacturing defaults, provided the default was present at delivery and that the appliance was correctly operated by the buyer. The warranty covers free of charge repair, or exchange of one or more defective components, or the exchange of the appliance for another appliance of the same value. It is up to Dalcq S.A. to decide which measure to undertake.

3. Warranty case When breakdown/default, you must immediately advise :

1. The store where you bought the appliance
2. The after sales service (written or via email) that the appliance will be returned, to provide an extended description of the problem with pictures

4. Packaging It is recommended to use the original packaging to return the appliance. If you use a different packaging, make sure it provides enough protection for typical transport risks and that it offers sufficient protection. A simple cardboard box filled with paper is not sufficient. Dalcq S.A. cannot be held responsible for damage resulting from insufficient packaging. The warranty then expires. The after sales service will inform you of the return procedure as well as of the costs this implies.

5. Cleaning If you don't clean the parts or the appliance before returning it, Dalcq S.A. will invoice a cleaning set rate. It is the responsibility of the buyer to prove the real costs of cleaning are inferior to the invoiced set rate.

6. Withdrawal of the right to warranty The right to warranty is withdrawn by :

- Incorrect use, treatment and storage. (for example, defaults caused by humidity, high temperatures)
- Repairs, repair attempts, modifications of any kind and use of non-original parts, etc. which were not executed by Dalcq S.A. or by an authorized company
- Insufficient packaging and bad transport
- Inappropriate mechanical influences on the appliance or on the parts of the appliance
- Defaults that are not caused by the finishing or production of the appliance, such as fall, collision, damage, fire, earthquake, damage by flood, lightning, etc
- Use other than household use, especially in a commercial environment
- The costs incurred by Dalcq S.A. because of the returning of the appliance by the buyer, without warranty or right to restitution will be for the buyer

7. After sales service

Dalcq S.A. - Rue du Hainaut 86
6180 Courcelles - Belgium
support@dalcq.com



frifri.BE