



THE PLANCHA REVERSO PL2000X+

—
User manual

frifri[★].BE



IMPORTANT WARNINGS

Always comply with the elementary safety prescriptions when using electrical appliances, including the following :

READ ALL INSTRUCTIONS BEFORE USE

- Before plugging in the appliance, check if the voltage indicated on the appliance matches the mains voltage of your house
- To prevent risks of electrical shocks, NEVER immerse the electrical cord, plug or appliance in water or any other liquid
- NEVER touch hot surfaces. Always use the handles or buttons
- Children under the age of 8 should not use this appliance
- Unplug the appliance when not in use and before cleaning
- Let the appliance cool down before assembling or disassembling the parts, before cleaning or storage of the appliance
- NEVER pull the electrical cord to unplug the appliance but hold the socket
- NEVER operate the appliance if the electrical cord or the plug are damaged or after malfunctioning or damage whatsoever. Return the appliance to the closest certified service center to examine, repair or modify the appliance
- The use of spare parts or accessories not recommended by the manufacturer brings risks of fire, electrical choc or injuries
- NEVER use outside or for commercial use
- ALWAYS use the appliance for what it is intended
- NEVER let the electrical cord hang over the edge of the table or kitchen counter and never touch hot surfaces

- NEVER place on or close to a heat source, such as a gas or electrical stove, nor in an oven
- Only use the appliance on a flat, heat resistant surface
- Be careful when moving all appliances with hot food or liquids, such as oil
- When using the appliance, make sure there is enough space around and above the appliance in order for the air to flow easily
- NEVER leave the appliance unattended when in use
- When using the appliance, keep it away from inflammable materials, such as curtains, paper, plastic, etc
- Always be careful when using the appliance near children or disabled persons
- Always start to insert the temperature probe in the appliance before plugging in the appliance. To unplug, first turn the control button on stand "0", then remove the plug from the socket
- NEVER use this appliance with an external timer or remote control
- This appliance is only meant to be used domestically
- The use of accessories not recommended by the manufacturer can cause injuries

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS MEANT FOR DOMESTIC USE

This appliance is ONLY meant to be used DOMESTICALLY. This appliance does not have parts to be repaired by the user. Never try to repair this appliance yourself. BE CAREFUL WHEN USING AN EXTENSION CORD; THE RATING SHOULD BE AT LEAST EQUAL TO THE RATE OF THE PLANCHA.

Do not leave the extension cord on the table or kitchen counter where it could be pulled by a child or where it could be tripped over.

POWER

An overload of the electrical circuit by other appliances could impair the functioning of the Plancha. The Plancha has to be connected to a different circuit from other working appliances.

EARTHED PLUG

The appliances are equipped with an earthed plug with 3 pins, which will only fit a socket suited for this kind of plug. This is a safety feature. If the plug should not fit the socket, contact a certified electrician. Do not try to bypass this safety feature.



DESCRIPTION OF THE APPLIANCE



Technical features

- Model : PL2000X+
- Power : 2000 Watts
- Voltage : 230 V CA
- Rate : 50 Hz



BEFORE FIRST USE

Always stick to the elementary safety prescriptions when using electrical appliances, including the following :

1. Remove all stickers from the appliance.
2. NEVER IMMERSE THE TEMPERATURE PROBE IN WATER.
3. Clean and treat the non-stick coating :
 - a. Check that the temperature probe isn't plugged into the appliance; if so, remove it from the appliance. Clean the baking plate, juice collector and the base with a soft sponge, warm soapy water, thoroughly rinse and dry
 - b. Put the juice collector and the baking plate back into place on the base (grill side up)
 - c. Set the temperature probe on the off stand «O» and plug it in the appliance.
If the temperature probe is not correctly inserted, an abnormal heat could occur and cause an accident or damage
 - d. To treat the baking surface, plug in the appliance in a suitable socket.
Turn the temperature button clockwise to set one of the low temperature positions.
Let the appliance heat up until the orange indicator light extinguishes, indicating the set temperature has been reached
 - e. Oil the surface with a small quantity of butter or margarine and remove the excess
 - f. Wait for the appliance to cool down, remove the temperature probe and turn the baking plate (Plancha side up)
 - g. Repeat steps (c) to (e) to treat the baking surface of the plancha

REMARK : Upon first use of the appliance, there might be a small smoke output. This is normal, due to the first heating of the internal elements. Your reversible Grill/Plancha is now ready for use and doesn't need any other treatment.

UTILISATION DE L'APPAREIL

1. Correctly place the juice collector in the base, as shown below

WARNING

In order to avoid any physical or material damage, the juice collector must be in place during baking.



2. Place the baking plate on the base (choose between the Grill or Plancha, depending on the food you would like to prepare).



GRILL



PLANCHA

3. Turn the temperature probe on stand «O» and insert the probe into the side of the appliance
4. Plug in the appliance
5. Turn the temperature probe on the desired temperature and preheat the appliance until the red indicator light extinguishes
6. Place the food on the non-stick baking plate
7. Thoroughly bake the food

NOTE : The red indicator light can turn on and off during baking, this indicates that the thermostat maintains the correct temperature for a perfect baking result on the grill/plancha.

8. Once finished, turn the temperature probe on the off stand «O» and unplug the appliance



TIPS AND TRICKS

Always preheat the appliance before use.

Be careful when biting stuffed food, such as cheese, tomatoes or jam: they could hold the heat and cause burning injuries when consuming immediately after baking. It is unnecessary to put butter on the outside of the bread since the appliance is equipped with a non-stick coating. However, to obtain golden bread, it is recommended to add a little bit of butter or margarine.

CLEANING AND MAINTENANCE

1. Unplug the appliance and let it cool down completely before cleaning
2. Remove the temperature probe.
NEVER IMMERSE THE TEMPERATURE PROBE IN WATER OR ANY OTHER LIQUID
3. Remove the baking plate by the handles
4. Remove the juice collector carefully to avoid spilling water, oil and other juices collected
5. Clean the baking plate, juice collector and base with a soft sponge and hot soapy water.
NEVER use steel wool or other abrasive detergents, these could damage the non-stick coating.
Thoroughly rinse and dry the appliance. These parts are dishwasher proof

STORAGE

1. Let the appliance cool down before storage
2. Store the appliance on a dry place, such as a table, kitchen counter or shelf

WARANTY

Dalcq S.A. provides a special warranty on all parts of the appliance subject to conditions below.
The legal regulations about warranty as well as the rights resulting from the legislation about

responsibility of the defective products remain unaffected. Possible right to reimbursement of the buyer in case of defaults remain valid, if the conditions below are met.

1. Period of the warranty

The warranty applies to all parts of the appliance and starts from the date of purchase (date of invoice) of the appliance and has a duration of 2 years when used privately.

2. Object of the warranty

Dalcq S.A. covers the material, construction and manufacturing defaults, provided the default was present at delivery and that the appliance was correctly operated by the buyer. The warranty covers free of charge repair, or exchange of one or more defective components, or the exchange of the appliance for another appliance of the same value. It is up to Dalcq S.A. to decide which measure to undertake.

3. Warranty case

When breakdown/default, you must immediately advise :

1. The store where you bought the appliance
2. The after sales service (written or via email) that the appliance will be returned, to provide an extended description of the problem with pictures

4. Packaging

It is recommended to use the original packaging to return the appliance. If you use a different packaging, make sure it provides enough protection for typical transport risks and that it offers sufficient protection. A simple cardboard box filled with paper is not sufficient. Dalcq S.A. cannot be held responsible for damage resulting from insufficient packaging. The warranty then expires. The after sales service will inform you of the return procedure as well as of the costs this implies.

5. Cleaning

If you don't clean the parts or the appliance before returning it, Dalcq S.A. will invoice a cleaning set rate. It is the responsibility of the buyer to prove the real costs of cleaning are inferior to the invoiced set rate.

6. Withdrawal of the right to warranty

The right to warranty is withdrawn by :

- Incorrect use, treatment and storage.
(for example, defaults caused by humidity, high temperatures)
- Repairs, repair attempts, modifications of any kind and use of non-original parts, etc. which were not executed by Dalcq S.A. or by an authorized company
- Insufficient packaging and bad transport
- Inappropriate mechanical influences on the appliance or on the parts of the appliance
- Defaults that are not caused by the finishing or production of the appliance, such as fall, collision, damage, fire, earthquake, damage by flood, lightning, etc
- Use other than household use, especially in a commercial environment
- The costs incurred by Dalcq S.A. because of the returning of the appliance by the buyer, without warranty or right to restitution will be for the buyer

7. After sales service

Dalcq S.A. - Rue du Hainaut 86
6180 Courcelles - Belgium
support@dalcq.com



ENVIRONMENT



- In accordance with the European standards*, used electric and electrical appliance cannot in any way be disposed with normal not sorted domestic waste. They must be brought to an official collection center

- Help the protection of the environment and bring this appliance to an official collection center for recycling of appliances at the end of their lifetime

- Bring a used appliance to an official collection center for recycling. Public services for domestic waste collection (the municipality) have collect points where used appliances from private households from the region can be disposed of for free. Collection centers might also come to pick up used appliances from private households

- Inform yourself about the pick-up dates in your region or contact the municipality to know where the collection centers are

* Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 on waste electrical and electronic equipment (WEEE)

This indicates that this appliance cannot be disposed with other domestic waste in the EU. To avoid damaging the environment and public health by an uncontrolled disposal of waste, the appliances have to be recycled in a responsible way to encourage sustainable use of material resources. To dispose of your used appliance, use the return and collecting systems, or contact the store where you bought the appliance. This person can pick up the appliance for an ecologic recycling.



frifri.BE